



Installation & Operation Instructions

BulkTite™ powder and bulk solids seal

1 Description of Use

The BulkTite seal is a product sealing solution using a positive gas purge to contain product in the equipment and/or prevent contamination ingress.

2 Hazard Summary

To ensure safe and reliable operation of this seal follow all installation and operation instructions. Failure to comply with these instructions may result in frictional wear of the seal components and/or product leakage.

3 Preparations for Installation

- 3.1 Check seal assembly drawing for any special instructions, modifications to the equipment, adapters or sleeves for seal installation and act accordingly.
- 3.2 Remove existing seals.
- 3.3 Inspect surfaces under gaskets to ensure they are free from pits or scratches. Break all sharp corners on shaft steps, threads, reliefs, shoulders, key ways, etc. over which gasket(s) must pass and/or seal against.
- 3.4 Thoroughly clean shaft and housing to remove oil and debris.
- 3.5 Shaft and housing surface must be 0.8 micrometer (32 µin) Ra or better.
- 3.6 Shaft tolerance +/- 0.051 mm (0.002 inch).
- 3.7 Mounting surface flatness to be 0.05 mm (0.002 inch) or better.
- 3.8 Seal mounting surface squareness to the centerline of the shaft should be within the values shown in Table 1. See Figure 1.

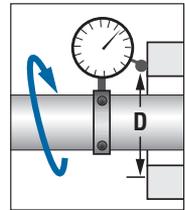


Figure 1

Maximum Squareness Allowed (TIR)

Table 1

Shaft Diameter (inch)	Maximum Shaft Angle	Indicator Reading (TIR, inch)							
		Indicator Contact Diameter, D (inch)							
		3	4	5	6	7	8	9	10
1	2°	0.104	0.139	0.174	0.209	0.244	0.279	0.314	0.349
2	2°	0.104	0.139	0.174	0.209	0.244	0.279	0.314	0.349
3	1°		0.069	0.087	0.104	0.122	0.139	0.157	0.174
4	1°			0.087	0.104	0.122	0.139	0.157	0.174
5	0.5°				0.052	0.061	0.069	0.078	0.087
6	0.5°					0.061	0.069	0.078	0.087

4 Installation

- 4.1 Do not disassemble seal, it is designed to be installed as an assembly.
- 4.2 Apply gas to the seal during the installation process to prevent internal damage at a minimum of 4 bar (60 psi) with a minimum flow rate of 7 lpm (0.25 cfm).
- 4.3 Lightly lubricate O-ring (item 76 - shipped unassembled) with lubricant provided; install in rotor; remove any lubricant from rotor face. Lightly lubricate shaft.
- 4.4 Install on the shaft with the gasket towards the mounting surface and slide the seal down the shaft into approximate final position.
- 4.5 Leaving the seal loose on the shaft, complete the bearing assembly locating the shaft into final position.
- 4.6 Install seal against the mounting surface concentric to the shaft. Position with vent pointed in the downward position between 4 and 8 O'clock.
- 4.7 Do not over tighten bolts when securing seal. Tighten to torque values for 304 SS cap screws:
 - #8-32 bolts to 20 in-lb
 - #10-24 bolts to 24 in-lb
 - 1/4-20 bolts to 75 in-lb
- 4.8 Plumb final gas line to both gland fittings.
- 4.9 Remove nylon centering screws and replace with plug screws shown in Figure 2. No thread sealant is required.
- 4.10 Do not operate equipment or introduce process without gas pressure supplied to the seal.



Figure 2

5 Standard Operation

- 5.1 Maximum radial runout: 6.35 mm (0.250 inch) TIR.
- 5.2 Maximum seal mounting surface temperature: 93°C (200°F).
- 5.3 For product pressures < 1 bar (15 psi) gas pressure should be regulated to a minimum of 4 bar (60 psi). See Table 2 for estimated gas consumption rate. For product pressure > 1 bar (15 psi) consult Engineering.
- 5.4 Maintain gas to the seal at all times while shaft is spinning or product is in the equipment.

Estimated Gas Consumption

Table 2

LPM (CFM) estimated gas consumption at 4 bar (60 psi) gas pressure		
Seal Size	Minimum	Maximum
1.000"	2.8 (0.10)	8.5 (0.30)
2.000"	2.8 (0.10)	8.5 (0.30)
3.000"	3.3 (0.12)	10.4 (0.37)
4.000"	4.2 (0.15)	12.3 (0.43)
5.000"	4.7 (0.17)	14.2 (0.50)
6.000"	5.7 (0.20)	16.5 (0.58)


6 Gas Supply

- 6.1 For best operation, gas supply must be clean and dry.
- 6.2 The recommended Flowserve gas control panel provides a 3 micron or better particulate filter, pressure regulator, visual flow meter, and pressure indicator to ensure the best performance of the BulkTite seal.
- 6.3 Optional additional components depending on gas quality: desiccant dryer and coalescing oil filter.
- 6.4 For more information on a recommended gas control panel see Flowserve BM# B0298647.

Gas Panel for BulkTite Seal

Figure 3

Pressure range	0.34 - 8.6 bar (5-125 psi)
Flow range	7-70 LPM (0.3-3.3 CFM)

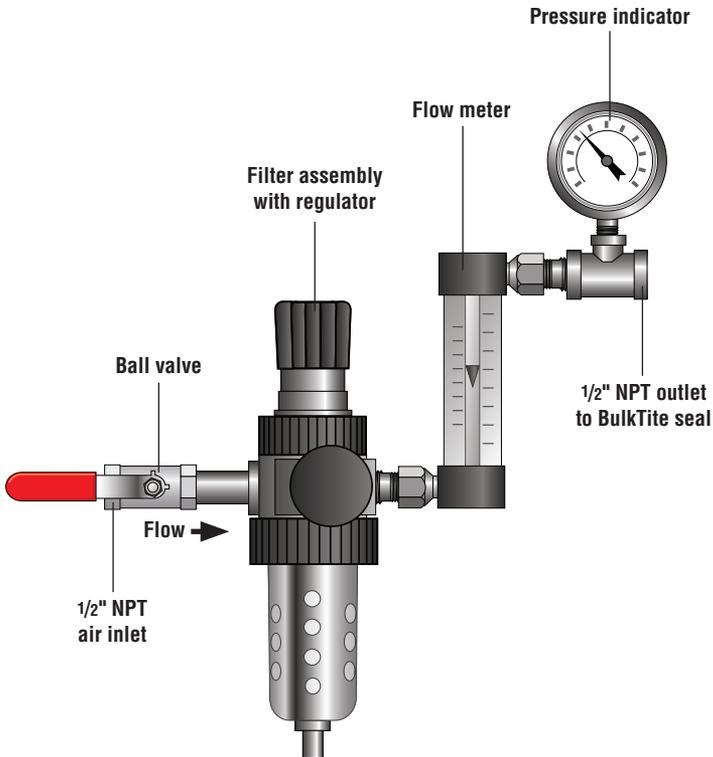



TO REORDER REFER TO

B/M # _____

F.O. _____

FIS229eng REV 12/17 Printed in USA

***To find your local Flowserve representative
and find out more about Flowserve Corporation,
visit www.flowserve.com***

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

© 2017 Flowserve Corporation

USA and Canada

Kalamazoo, Michigan USA

Telephone: 1 269 381 2650

Telefax: 1 269 382 8726

Europe, Middle East, Africa

Roosendaal, the Netherlands

Telephone: 31 165 581400

Telefax: 31 165 554590

Asia Pacific

Singapore

Telephone: 65 6544 6800

Telefax: 65 6214 0541

Latin America

Mexico City

Telephone: 52 55 5567 7170

Telefax: 52 55 5567 4224